


Supplement

Title: i400E Inst. Sht. Supplement Issue: 2
Print Date: July 2013 Issue Date: 8/13
Part Number: 4367177 Page Count: 1
Revision/Date:

This supplement contains information necessary to ensure the accuracy of the above manual.

Change #1, 66238

In the **Symbols** Table, remove the following:

	Conforms to relevant South Korean EMC Standards.
---	--


Under **Safety Specifications**, remove the **Electromagnetic Compatibility** section.

Change #2, 66430

Add the following to the **Safety Information**:

- Do not use the current sensor above its rated frequency.

In the **Symbols** Table add:

CAT III	Measurement Category III is applicable to test and measuring circuits connected to the distribution part of the building's low-voltage MAINS installation.
	Conforms to relevant Australian Standards

Under **Electrical Specifications**, replace **Working Voltage** and **Common Mode Voltage** with:

Working Voltage: 600 V ac rms from earth ground, in compliance with IEC 61010-1 and IEC 61010-2-032

Common Mode Voltage: 600 V ac rms from earth ground, in compliance with IEC 61010-1 and IEC 61010-2-032

Under **Safety Specifications**, replace **Category Rating** with:

Category Rating: IEC 61010-1: 600 V CAT III, Pollution Degree 2

Under **Operation**, replace step 1 with:

1. Insert the banana plug into the common and voltage inputs of a multimeter and switch the multimeter on.

In **Figure 1**, move the Tactile Barrier arrow down to just above the **Fluke i400E AC Clamp Accessory** area.